

# PP-8

## BASIC VALVE (NON-AUTOMATIC)

## PUSH PULL CONTROL VALVE

## CATALOG 03-L-4C

The PP-8 push pull control valve is a manually operated, on-off control valve.

Unlike most other push pull control valves it is non-automatic and will remain in the position it is manually placed in, regardless of delivery or supply pressure.

The PP-8 is commonly used to control the tractor parking brakes only on "121" air brake systems.

FOR SERVICE/MAINTENANCE INFORMATION  
SEE SERVICE DATA SHEET SD-03-61



WEIGHT - 0.6 LBS.

DEVICE CODE - 3618

VMRS NO. - 13-010-104

- Available Remanufactured Exchange
- Button and Mtg. Nut not Furnished with Exchange Valve, Roll Pin Furnished (Pc. No. 291111)

NO.	PC. NO.	DESCRIPTION	QUAN.
1	230401	Nut 1/4"	1
2	202678	Special Washer	1
3	240277	Inlet & Exhaust Valve (Includes Insert 240276)	1

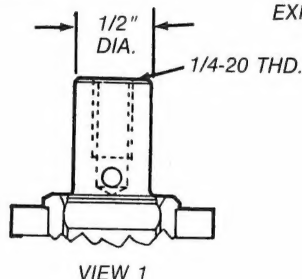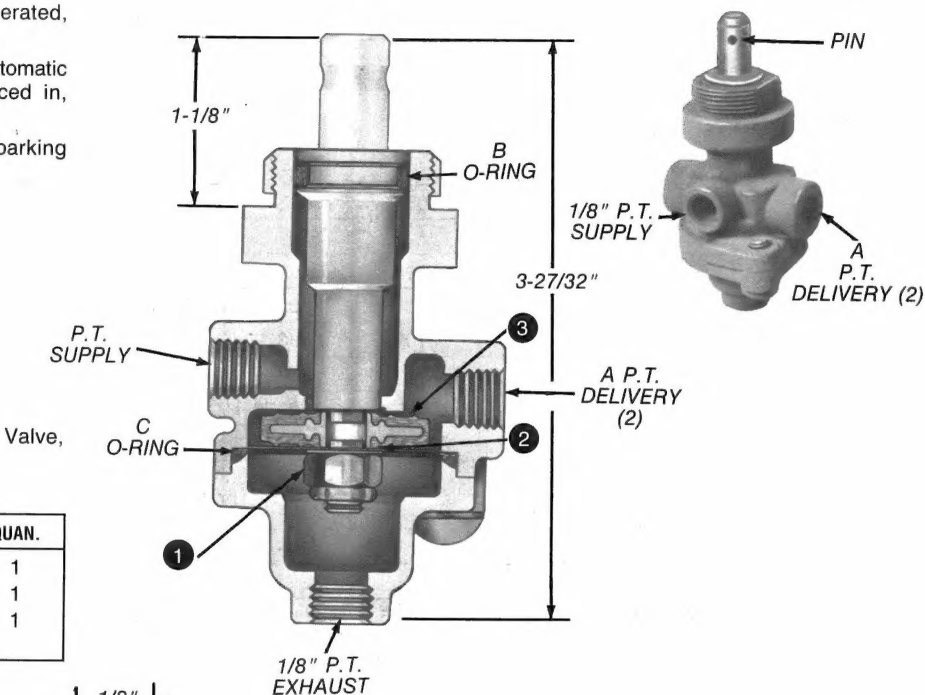


### BASIC REMAN & SERVICE NEW

PIECE NO.	A PIPE THD.	B O-RING	C O-RING	REMARKS
287238	1/8-27	291053	240480	—
287240	1/8-27	291053	240480	VIEW 1
287418	1/4-18	291053	240480	—
289259	1/8-27	292927	292928	VIEW 1

## O.E. TO BASIC

PIECE NO.	BASIC VALVE	*BUTTON	NUT	LOCK WASHER	REMARKS
287230	287238	291038	291043	—	—
287231	287238	291037	291043	—	—
287234	287240	—	212382	291432	View 1 add Pipe Plug 232999
287235	287238	291041	291043	—	—
287236	287240	—	212382	291432	View 1
287256	287418	291041	291043	—	Cust I.D.
287567	287238	292979	291043	—	Cust I.D.
287986	287238	291433	291043	—	—
288008	287418	—	—	—	Cust I.D.
288650	287238	—	291043	—	—
289090	287238	291625	291043	—	—
289260	289259	—	212382	291432	View 1
101251	287238	291625	291043	—	Cust I.D.
101297	287238	292979	291043	—	—
101784	287238	292979	291043	—	Cust I.D.
102186	287238	294331	291043	—	—
103792	287418	291433	291043	291432	—

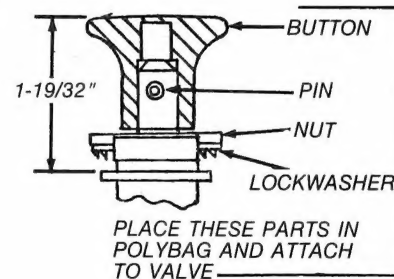

\*NOTE: FOR BUTTON WORDING AND CONFIGURATION REFER TO CATALOG PAGE 03-L-12A